

TROUBLESHOOTING FOR SHEETFED AND WEB PRESSES

LOW SPOT : Shows up as non-printing area.

CAUSES

1. Insufficient packing.
2. Insufficient impression.
3. Defective blanket.
4. Uneven blanket cylinder.
5. Build up on back cylinder.
6. Glazed blanket.
7. Plate blinding.

REMEDIES

1. Increase packing.
2. Increase impression.
3. Repair or replace blanket.
4. Check cylinder.
5. Clean back cylinder.
6. Clean blanket.
7. Clean or remake plate. See **BLINDING** section of this guide.

